

WINTERIZATION OF THE OASIS SYSTEM

The oasis distribution module must be completely drained of domestic water any time the heater is stored where freezing temperatures may be experienced.

There are two common methods for winterizing.

The first method is to empty all fresh water lines.

- A. Open Domestic water drain valve on Distribution Module. Gravity will drain the water out of the Distribution Module heat exchanger.
- B. It's recommended that you "blow" your water lines out with air pressure.
- C. The Oasis Heating module is filled with antifreeze and doesn't need any attention. The unit can stay on to provide heat for the interior zones.

The second method is to replace fresh water with RV antifreeze

- A. The Oasis Heating and Distribution Module require no attention. Just winterize the hot water faucets like everything else in the coach. Note that the Oasis Distribution Module stores approximately 0.1 gallons of water.
- B. The Oasis Heating module is filled with antifreeze and doesn't need any attention. The unit can stay on to provide heat for the interior zones.